
 








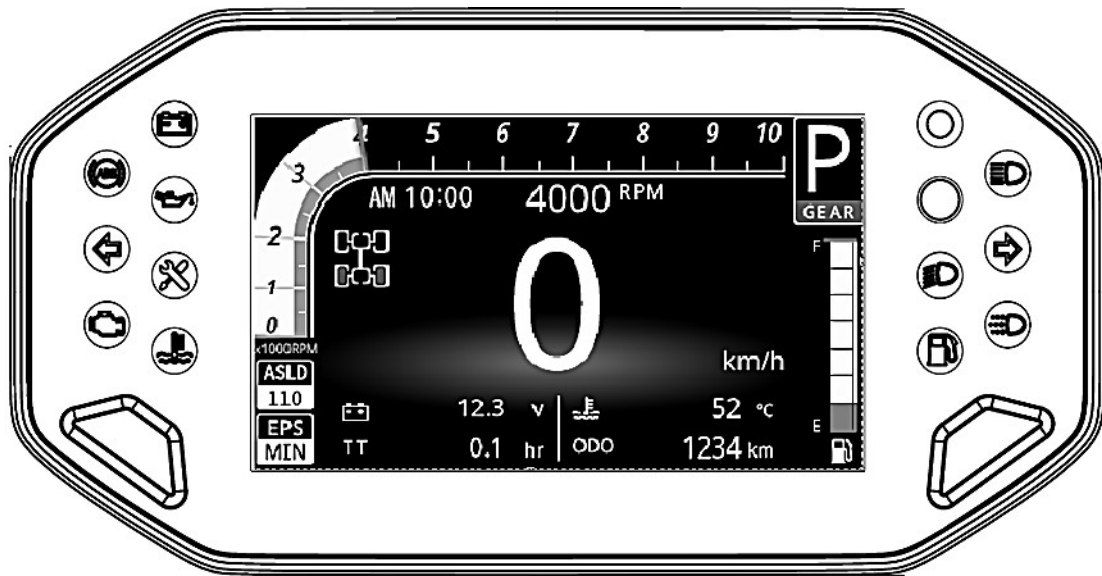






TFT SPEEDOMETER



	Battery warning light		The photosensitive element
	Oil pressure warning		ASLD setting and warning
	Maintenance indicator		Low beam
	Water temperature		Fuel warning light
	ABS indicator		High beam
	Left direction indicator		Right direction indicator
	Engine fault warning light		Daytime running lights

BUTTON OPERATIONS

A. Main Page :

Press Left button	TT→RT→AVE SPEED→TT
Press Right button	ODO→Trip A→Trip B→Trip O→MAX mode
Press and hold Left button	1.TT : go to ABS ON/OFF setting (ABS flash three times)
	2.RT : reset the RT
	3.AVE SPEED : reset the AVE SPEED
Press and hold Right button	1.ODO : go to EPS setting , press left button go to MIN→MAX→OFF→MIN , press and hold right button to exit the setting and back to ODO
	2.Trip A : reset the Trip A
	3.Trip B : reset the Trip B
	4.Trip O : reset the Trip O
	5.Max mode : reset MAX mode information

B.SETUP :


1. Function select

Press left button	Up
Press right button	Down
Press and hold left button	Back to main page
Press and hold right button	Enter function select

2.Function setting

Press left button	Adjust the setting
Press right button	Go to next setting
Press and hold right button	Enter function select

DISPLAY DESCRIPTION :

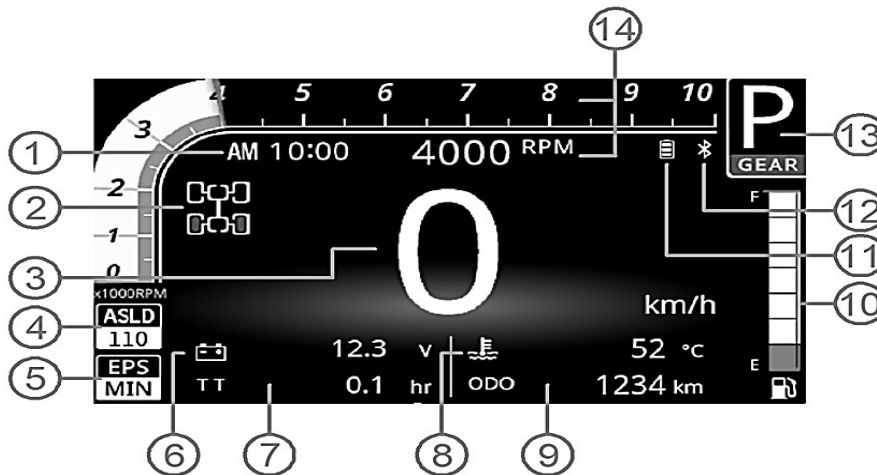


1	Clock	8	Temp
2	Drive Mode	9	ODO, Trip
3	Speed	10	Fuel
4	ASLD	11	Phone Battery
5	EPS	12	BLUETOOTH
6	Volt	13	GEAR
7	TT, RT, AVE SPEED	14	RPM




MAX mode
 1.Max RPM
 2.Max Speed
 3.Max temp.




Music-1

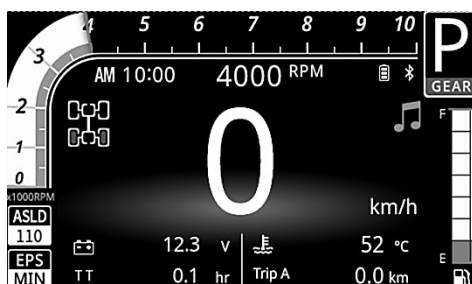


Music-2

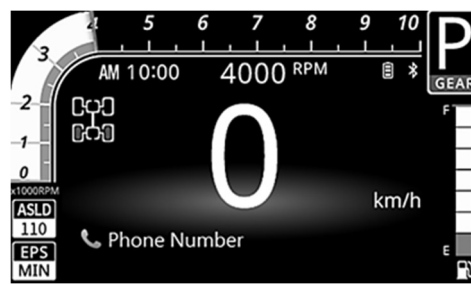


Incoming call-1

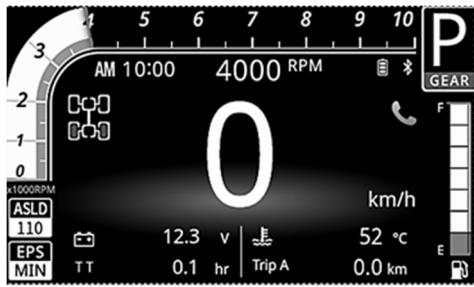

Incoming call-2

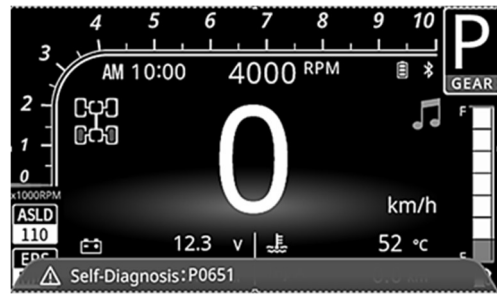


Fault warning-1

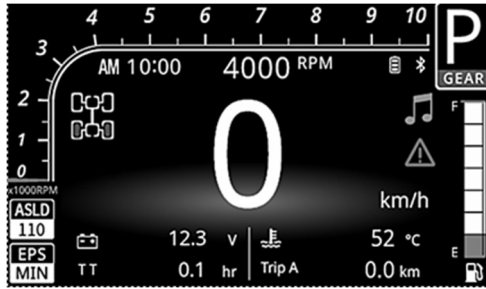


Fault warning-2




Setting Mode

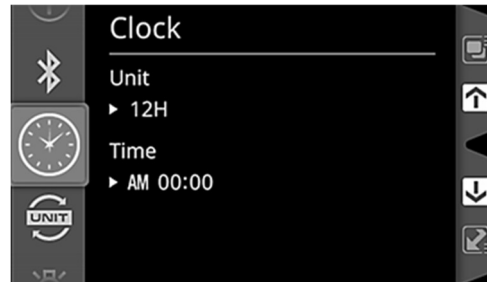

1. 12/24 hour clock
2. Time setting

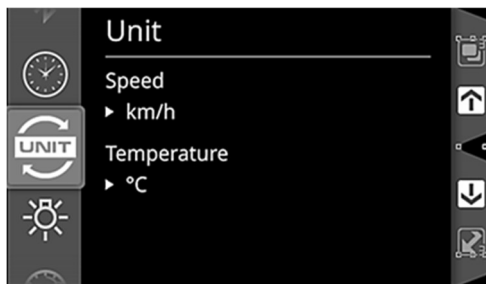


1. Speed unit setting
2. Temperature unit setting

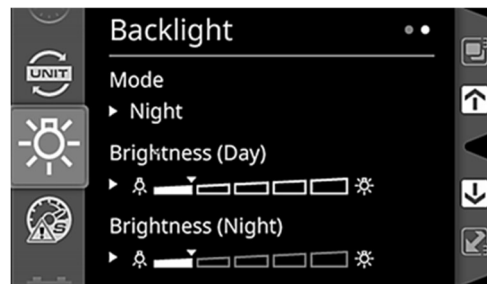


1. Main screen background mode setting: (day, night, automatic)




1. ASLD (over speed warning) setting

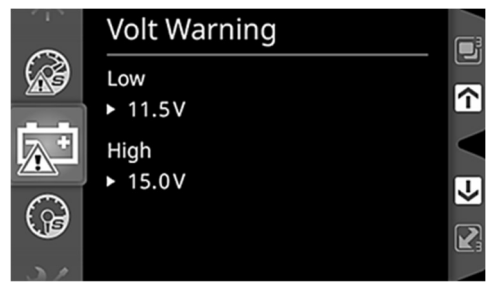

1. Voltage warning setting

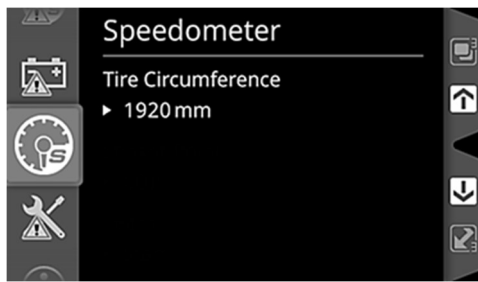


1. Wheel diameter setting
Note: For dealer only

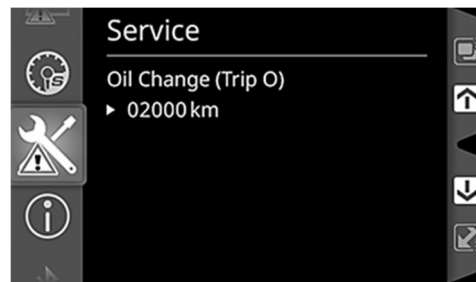

1. Maintenance mileage setting
Note: For dealer only



1. Reset settings
Note: For dealer only

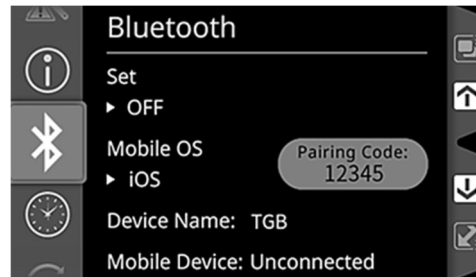

1. Bluetooth on/off
2. Mobile phone system (IOS/Android)